

STARTING NUMBERS

Polaris PRO RMK 800 (2011-2015)

"Fuel"

RPM

4500	02	01	00	00
5500	03	01	-03	-05

"PSI"

4300	08	11	11	00
5500	14	18	20	20
6700	25	34	36	32
7500	26	36	37	39
8200	25	30	33	39

Extra Fuel

00 00 -07

PSI

<4.6

ON

RPM

3900-5900

ON



www.BoonDockers.com

208-542-4411 (Local)
877-522-7805 (Toll Free)