

# **GT Tuner Instructions**

## **Exporting/Importing Tuning Maps**

### **RZR XP 1000 (2014-2016)**

#### **Exporting a Map to BoonDocker**

1. If your RZR is equipped with an LCD screen dash, unplug the LCD screen.
2. If your RZR is equipped with power steering, remove the power steering fuse.
3. Turn the key to the *On* position without starting the engine.
4. Turn the GT Tuner *On*.
5. Select *Menu*. Then select *Change Vehicle* (Complete Change Vehicle).
6. Select *Tuning*, and then select *Install Custom Tuning*. Scroll to the bottom of the screen and *Agree* to the disclosure.
7. Select *Export Tune*.
8. After the GT Tuner finishes exporting, turn the GT Tuner *Off* and remove the SD card.
9. Connect the SD card to a computer.
10. Open the *User* folder on the SD card, and find the *Stock ATV* file.
11. Send the *Stock ATV* file as an email attachment to BoonDocker.

#### **\*2016 RZR XP 1000**

If your 2016 model will not export the tune, select *Menu* on the GT Tuner. Then select *Show Settings*. Find the *ECU Serial Number*. Send this *ECU Serial Number* via email to BoonDocker.

#### **Importing a Map to the GT Tuner**

1. Move the new *Stock ATV* file from BoonDocker back to its proper location in the *User* folder on the SD card.
2. Install the SD card back into the GT Tuner.
3. Turn the key to the *On* position without starting the engine.
4. Turn the GT Tuner *On*.
5. Select *Menu*. Then select *Change Vehicle* (Complete Change Vehicle).
6. Select *Tuning*, and then select *Install Custom Tuning*. Scroll to the bottom of the screen and *Agree* to the disclosure.
7. Select *Install Custom Tuning*.
8. Select *Custom Map Off of SD Card*.
9. After the GT Tuner finishes installing the new map, turn the key to the *Off* position.
10. If applicable, reconnect the LCD screen dash and reinstall the power steering fuse.
11. You can now start the RZR.



**www.BoonDockers.com**

**208-542-4411 (Local)**  
**877-522-7805 (Toll Free)**