 





BoonDocker

P E R F O R M A N C E


*Timing Chain Tensioner
Installation Instructions*

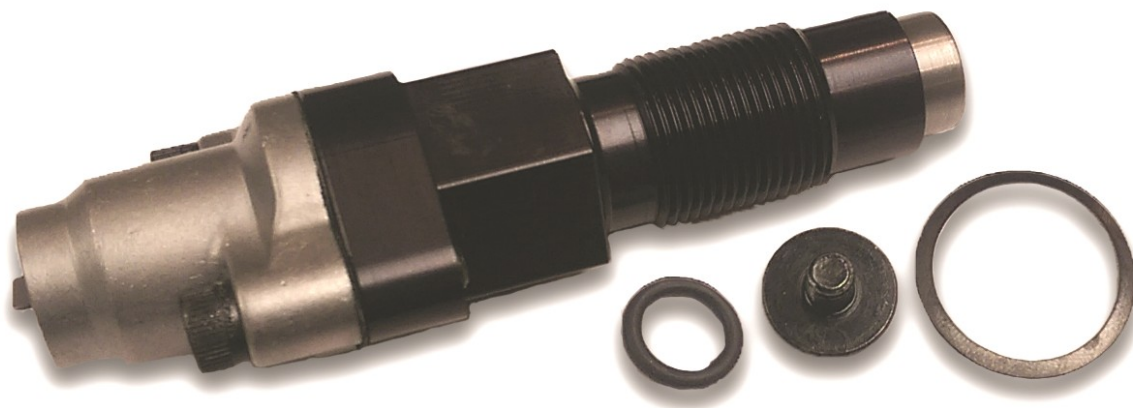

 
Timing Chain Tensioner

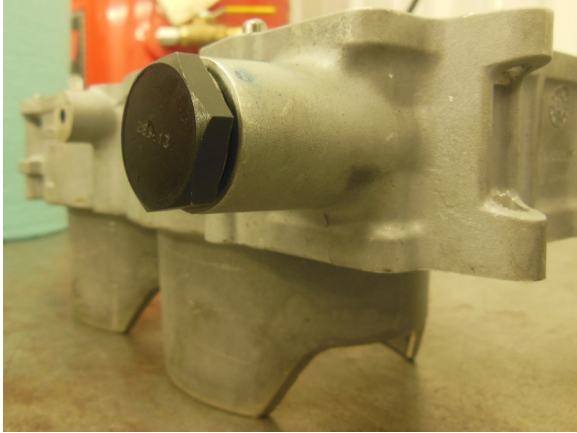

 
1. Locate and remove the stock timing chain tensioner on the MAG side of the cylinder.

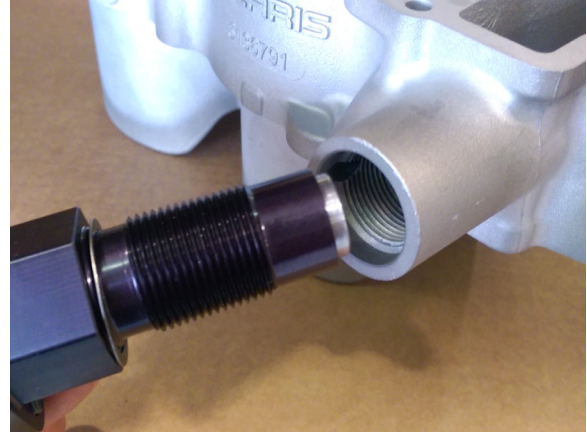

 2. Place the included washer between the cylinder and the housing then screw the housing clockwise into the stock location.

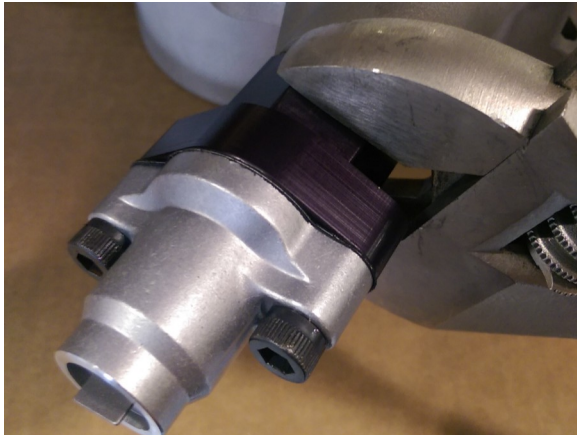

 3. Using a wrench, tighten the tensioner housing against the cylinder.

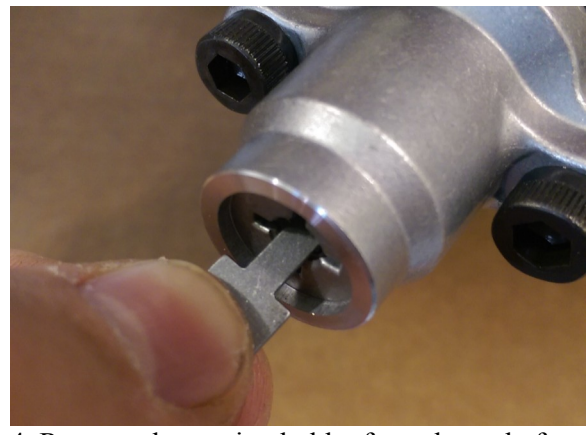

4. Remove the tension holder from the end of the chain tensioner. This may not release; check that it released by using a small flat blade screwdriver and turning the screw counter



5. Place the included gasket onto the 8mm bolt and then screw into end of tensioner where you removed the tension holder. Make sure the tensioner released and applied tension on the timing chain. Torque to 87 in-lb.



6. Turn engine over two revolutions after install to be sure the chain does not jump.