


BoonDocker Cold Air Intake



1. Remove the stock air intake plenum from the underside of the hood. Heating the tabs will help prevent the tabs from breaking. Remove all of the internal ducting.

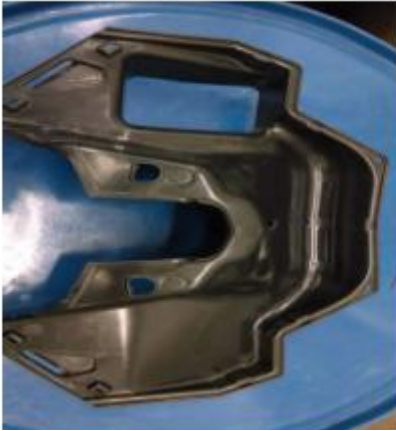

2. Cut out the provided template and position on the plenum as show. The template will follow the plenum mold. Trace the oval hole as shown.



3. Trim the oval hole out as shown.



4. Drill the three 3/16" holes and rivet the hood adaptor from the inside as shown. Remove the foam from around the stock air intake. Install the Frogskinz over the stock air hole on the plenum.



5. Install the aluminum tube (shown as silicone in the photo) to the turbo with the two provided clamps. Leave the clamps loose. Install the aluminum tube onto the hood adaptor. Only one clamp is used here for easy hood removal. Adjust for fit and tighten all of the clamps.

