



RZR 900 Control Box Installation

Before you begin, please read all the instructions below and check kit contents.


Kit Contents:

Quality check by:

- | | |
|--|---|
| ___ 1 Control Box | ___ 1 Blue Butt Connector |
| ___ 1 battery connector | ___ 1 TPS Adapter |
| ___ 5 8" Zip Ties | ___ 1 Boost Solenoid (installed with Kit) |
| ___ 5 4" Zip Ties | ___ 24" 3/16 hose (Installed with Kit) |
| ___ 1 5/32 Push to connect fitting (Installed on intercooler with Turbo Kit) | |
| ___ 1 Temp Sensor (Installed on intercooler with Turbo Kit) | |

Make sure all wires are routed and zip tied away from moving parts and heat sources.

Connector Index

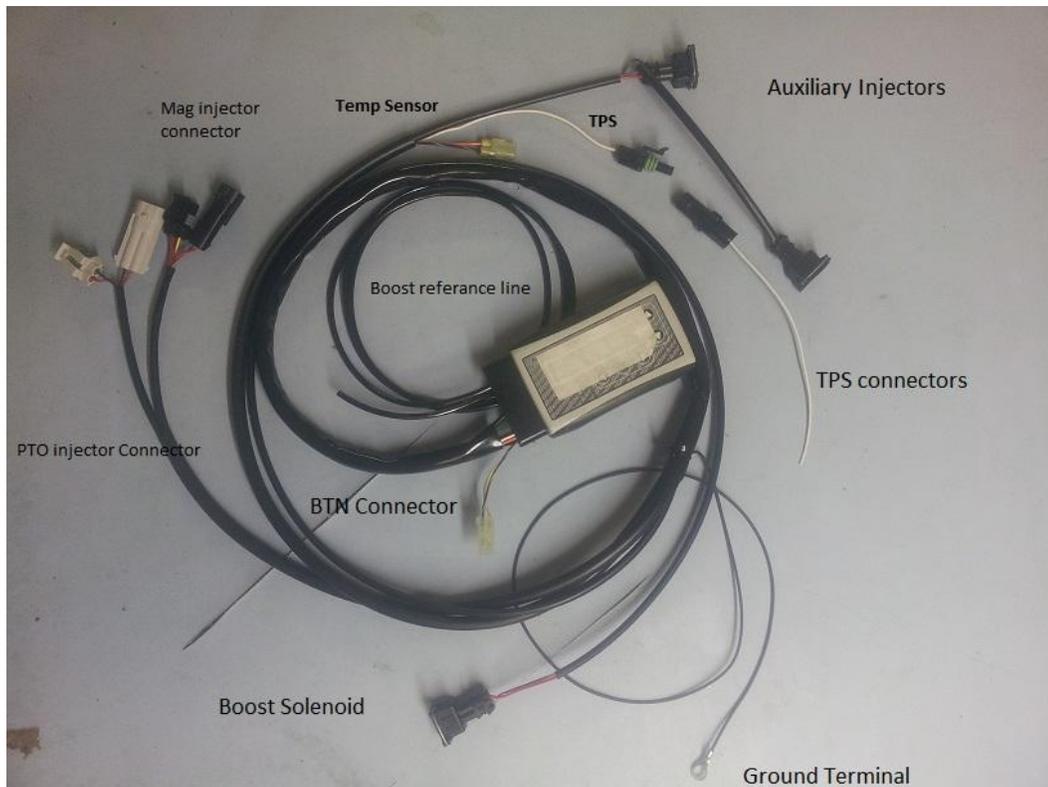

TPS installation



RZR 900 Control Box Installation

1. Locate the Throttle Position Sensor Connector.
2. It is a 5 position connector located on the Clutch side of the Throttle Body.



3. Tap the White wire to the Green Wire on TPS connector using supplied Heat Shrink Butt Connector. Shrink the ends using a heat gun.





RZR 900 Control Box Installation EFI System

The Injector connectors are located under the bed on the clutch side.

The black connectors are for the MAG injector and the Gray connectors are for the PTO injector.




Auxiliary Injectors

Attach Aux Inj 1 (Violet wire) to left injector

Attach Aux Inj 2 (Grey wire) to right injector

Ground location

Ground to stock ground location underneath rear seat

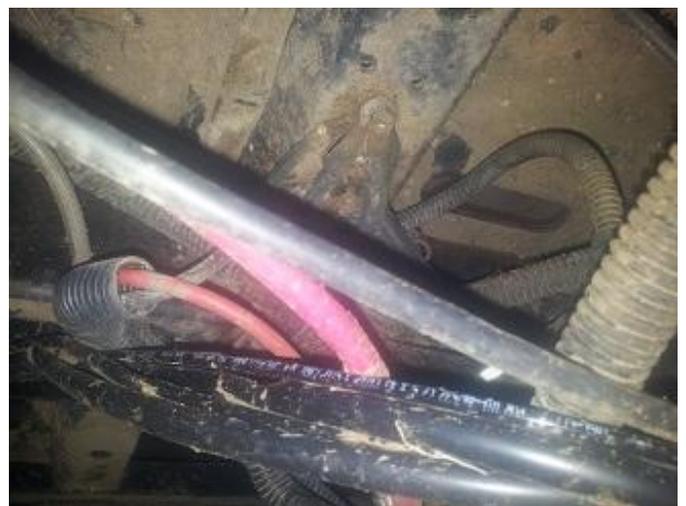



RZR 900 Control Box Installation



Boost Solenoid installation location

Mount and install the Boost Solenoid close to the rear of the machine, below the Turbo

